




EVO-1036

EVO MFG HD Swaybar Endlinks

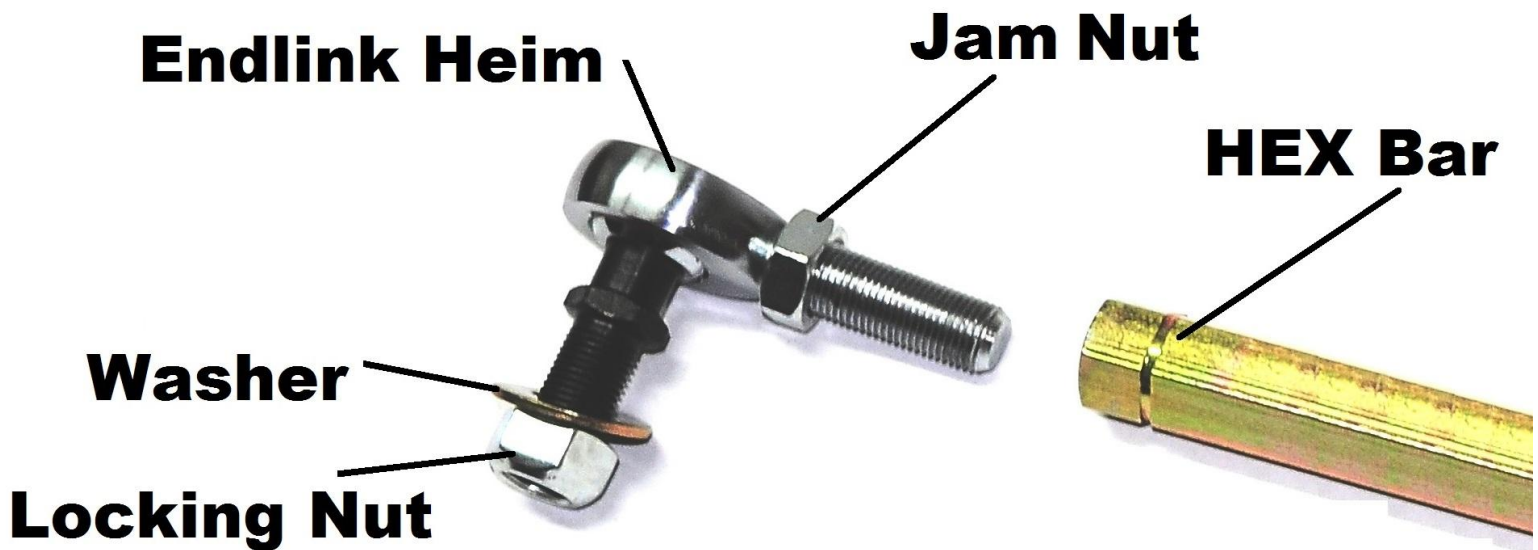

EVO MFG HD Swaybar Endlinks come unassembled from our facility. To properly assemble the EVO HD Swaybar Endlinks follow these steps.

- Install a Jam Nut on each Endlink Heim as illustrated in photo above.
NOTE; There are 2 Left Hand Thread Heims and Jam Nuts as well as 2 Right Hand Thread Heims, and Jam Nuts.
- Install the Heim Joints into the EVO HD Swaybar Endlink Hex Bars. The Hex Bar has a groove on the end which is Left Hand Thread as shown in photo. Set to desired length and tighten jam nut down to hex bar. You should now have two assembled EVO HD Swaybar Endlinks ready to install on your vehicle.
- Use the included washers and locking nuts to secure the EVO HD Swaybar Endlinks to your vehicle. Torque to 80 ft LBS. **DO NOT OVER TORQUE**